



Angle Finder/Measure

Code: 26017

Operating Instructions

To find an angle: Lay a spirit level or item with a straight edge on to the required object. Attach the Angle Finder/Measure to the spirit level/straight edge. Turn the dial until the bubble is centred. The pointer now indicates the angle being measured.

To set an angle: Turn the dial on the Angle Finder/Measure until the arrow points at the desired angle. Lay a spirit level or item with a straight edge on to the required object and attach the Angle Finder/Measure. Rotate the object until the bubble is centred.

SAFETY WARNING

Always ensure that you wear appropriate personal protection equipment.

Prospect House
George Cayley Drive
Clifton Moor
York
England
YO30 4XE

Tel: +44 (0) 1904 692723
Fax: +44 (0) 1904 690385
Website: www.YorkSurvey.co.uk
E-Mail: sales@yorksurvey.co.uk



Angle Finder/Measure

Code: 26017

Operating Instructions

To find an angle: Lay a spirit level or item with a straight edge on to the required object. Attach the Angle Finder/Measure to the spirit level/straight edge. Turn the dial until the bubble is centred. The pointer now indicates the angle being measured.

To set an angle: Turn the dial on the Angle Finder/Measure until the arrow points at the desired angle. Lay a spirit level or item with a straight edge on to the required object and attach the Angle Finder/Measure. Rotate the object until the bubble is centred.

SAFETY WARNING

Always ensure that you wear appropriate personal protection equipment.

Prospect House
George Cayley Drive
Clifton Moor
York
England
YO30 4XE

Tel: +44 (0) 1904 692723
Fax: +44 (0) 1904 690385
Website: www.YorkSurvey.co.uk
E-Mail: sales@yorksurvey.co.uk