



Nothing else measures up!

Follow us!



Prospect House
George Cayley Drive
Clifton Moor
York
England
YO30 4XE

Tel: +44 (0) 1904 692723
Fax: +44 (0) 1904 690385

E-Mail: sales@yorksurvey.co.uk



Anton Flowmate II




Operating Instructions


INSTRUCTIONS FOR USE

1. To move the handle to the opposite side, push the handle firmly downwards to unclip. Replace on opposite side.

2. Hold upright and place the flow measure directly under the flow of water (fig. 1)

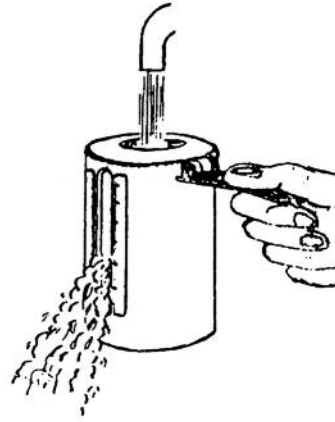

3. The flow through the open slot in the body will create a weir effect, thus forming a level within the body.

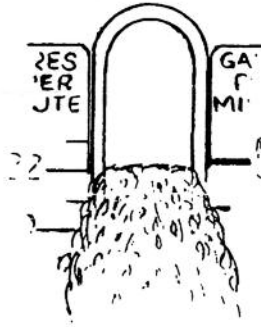

4. The point at which this level flows through the open slot will give a flow reading on both scales (fig. 2)

NOTE:

The reading is at the point where the water level breaks at the inside edge of the weir slot. (fig. 3)

To obtain a more stable reading, always ensure that any aerators are removed from the top.

