

YORK Survey Supply



Nothing else measures up!

Follow us!



Prospect House
George Cayley Drive
Clifton Moor
York
England
YO30 4XE


Tel: +44 (0) 1904 692723
Fax: +44 (0) 1904 690385

E-Mail: sales@yorksurvey.co.uk



YORK Survey Supply

**12V/24V
Flashing Amber Beacon**

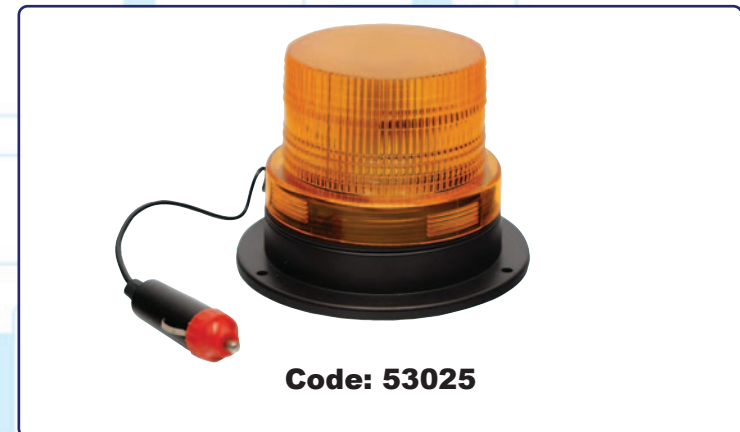

Operating Instructions

12V/24V Flashing Amber Beacon

Instructions for Use

Health & Safety

This LED amber warning beacon is very bright. We highly advise that you set up the beacon light when either the vehicle is switched off or when the vehicle is stationary and parked up.

To use this LED amber warning beacon flashlight, please follow the instructions below:

1. Ensure that your vehicle is stationary.
2. Take the beacon flashlight out of its packaging.
3. Plug the beacon into either a 12V or 24V plug socket of your vehicle.
4. Once plugged in, position the beacon onto your vehicle's roof using the beacon's magnetic base or place it on your vehicle's dashboard. (The beacon can be fixed using screws if needed).
5. If your vehicle's engine is turned on, the beacon will start its rotary LED flash, however, if the vehicle's engine is switched off, then the beacon will not start until the vehicle is switched on.
6. To turn off the beacon, simply either turn off the engine or remove the plug from the vehicle's 12V or 24V socket.
7. Store the beacon light away appropriately for future use.

Important: This product is NOT ECE R65 approved. No screws are included.

