



Nothing else measures up!

Follow us!



Prospect House
George Cayley Drive
Clifton Moor
York
England
YO30 4XE

Tel: +44 (0) 1904 692723
Fax: +44 (0) 1904 690385

E-Mail: sales@yorksurvey.co.uk



Search Mirror Telescopic Arm



Code: 28300

Operating Instructions



User Instructions for Search Mirror Telescopic Arm

Extending the Arm

To extend the arm rotate the mirror mount (A) until the locking mechanism is disengaged, see fig. 1. Once disengaged pull the base of the mirror mount away from the handle until each section is fully extended and locked into position, see fig.2.

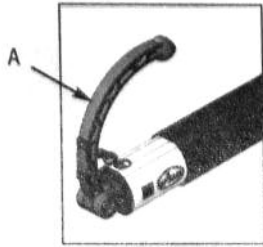


Fig 1.

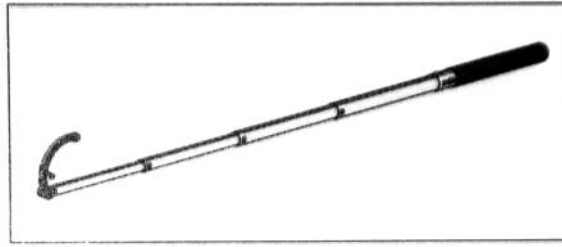


Fig 2.

Collapsing the Arm

To collapse the arm press and hold the handle button (B) and push at opposite ends of the arm until fully collapsed, see fig. 3. Rotate the handle mount until the locking mechanism is fully engaged with the hole, see fig. 4.

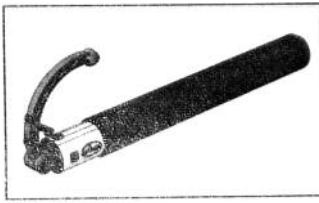
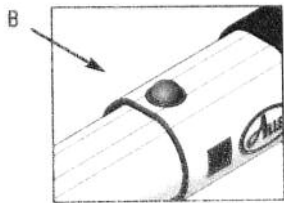


Fig 3.

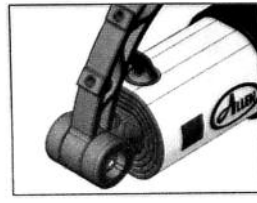


Fig 4.

Attaching a Mirror

To attach a mirror to the arm simply screw male thread on mirror into female thread on mirror mount until tight, see fig. 5. The angle of the mirror can be adjusted by rotating the mirror mount.

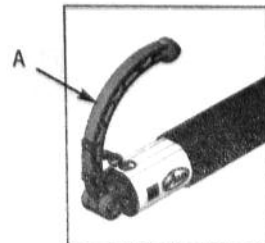


Fig 1.

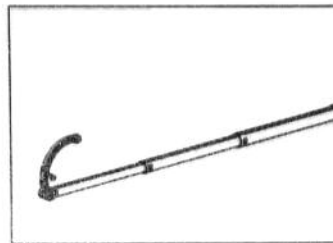


Fig 2.