



### Nothing else measures up!

Follow us! York Survey Supply Centre @York\_Survey @York\_Survey

Prospect House George Cayley Drive Clifton Moor York England YO30 4XE

Tel: +44 (0) 1904 692723 Fax: +44 (0) 1904 690385

E-Mail: sales@yorksurvey.co.uk





## 500W Halogen Work Light



# **Operating Instructions**

### **IMPORTANT: READ THIS INFORMATION BEFORE USE!**

#### **Assembly Instructions**

Do not assemble while plugged into power.



1. Insert stand base (1) into other end of tube. Use the stand handle (2) to position the lamp to the desired angle. Insert and tighten angle adjustment knob (3)




2. Lamp angle may be altered simply by loosening the angle adjustment knob (3) moving the stand handle to to bring the lamp to the desired angle, then tightening the angle fixing knob **Inserting or Replacing Halogen Lamp** 


Important: Ensure unit is disconnected from power point. Allow time for unit to cool before handling.



1. Unscrew retaining screw on top of lamp. This will release the protective grid, front surround and glass faceplate.

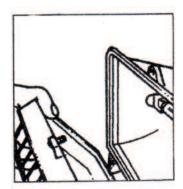

2. Lower front surround down. It will be retained by the hinges

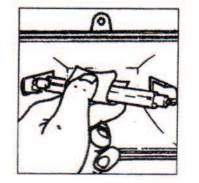

3. To insert halogen tube: unwrap globe, taking care your fingers do not touch the tube. Use wrapping to handle the tube. Push one end of tube into either of the spring-loaded sockets. Locate other end on other socket, and release.



4. Carefully replace front surround, making sure it is correctly positioned. Screw up tightly.