

Alternatively, you can press the **red stop sign symbol** on the tool bar and this will also stop the software from recording.



To save the data for future reference, go to **File(F), Export Data** and this will automatically take you to the **Save As** window to save the data as a **Microsoft Excel** spreadsheet. Before saving the data, change the file name from **\*.xls** to an appropriate name, as it will not allow you to save the data as **\*.xls**.



To save the data as a text file rather than an Excel file, go to **File(F), Save** and change the file from **\*.txt** and press **Save**. Or alternatively, you can press the **floppy disc symbol** on the toolbar.

### 9. Datalogger Window

To use the **DATALOGGER** window you must have saved data stored to your computer from the software, otherwise you will not be able to use this facility. This function allows you to view any saved data as a graph rather than a **txt** or **xls** file.

To open the **DATALOGGER** window, go to **DataLogger(D)** at the top of the **DT-1309** software and the **DATALOGGER** window should appear upon the desktop. You will notice that the window will appear to be blank because the data you wish to view needs to be imported from the computer into the software.




To import data go to **Import Data(I)** at the top of the **DATALOGGER** window and the software will automatically detect data saved in the computer and list them.



However, this will only work with data saved as a text file and not an excel file.

Click on the data you wish to open and this will automatically import the data to the **DATALOGGER** window. You will notice that there is no information on the graph. This is because you have not selected the data, on the left hand side of the window, that you wish to view.

On the left hand side of the **DATALOGGER** window you will see three of five columns (the other two can be seen by using the scrolling) that have the headings: **Set, DATE, TIME UNIT** and **NUMS**. Highlight the row of information you wish to view in **blue** by clicking on the row once. With the row still highlighted, double click on the row and the data you have selected should appear upon the graph.

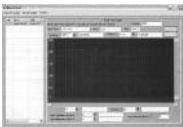

### 10. Using/Interpreting the Graph

With the data imported into the **DATALOGGER** window, select the data you wish to view and a red line graph will appear with information about the recorded data

displayed above the graph in the boxes labelled: **Real-Time, DataNo, Start Time, Unit, AVG, Maximum** and **Minimum**.

**Real-Time From: 2008-04-18 10:18:01 To: 2008-04-18 10:18:27** is the date and time of when the meter started and finished recording.

**DataNo. 228** is the total amount of recordings taken within the recording period.

**Start Time 10:18:01** is the time that the meter began recording data.

**Unit Lux** is the unit that the meter was measuring in whilst recording.

**Avg 234.0** is the average taken from all the readings recorded.

**Maximum 347.4 @ 10:18:06** is the maximum lux reading recorded and the time it was recorded.

**Minimum 47.9 @ 10:18:24** is the minimum lux reading recorded and the time it was recorded.

At the bottom of the **DATALOGGER** window you will see empty boxes labelled: **CursorA, CursorB, Max.Between A and B, Min.Between A and B** and **Avg.Between A and B**. Unfortunately, no data can be displayed in these boxes on the **DATALOGGER** window because it is a facility that can only be used on the main **LX-1309** software window when the data has just been recorded.

To display information in these boxes on the main window, double click on any part of the graph once to display a green line and double click again on a different part of the graph (must be to the right of the green line) to display a blue line. The green line is **CursorA** and the blue line is **CursorB**. By using these cursors it allows you to focus on a sample of all the data recorded and find out information about the sample in the boxes below the graph.

**CursorA 164.5 @ 10:18:07** displays the time and lux of the recorded data where **CursorA** is positioned.

**CursorB 282.2 @ 10:18:16** displays the time and lux of the recorded data where **CursorB** is positioned.

**Max.Between A and B 341.1 @ 10:18:10** is the maximum lux reading detected by the meter between the two cursors and the time of which this reading was recorded.


**Min.Between A and B 93.9 @ 10:18:08** is the minimum lux reading detected by the meter between the two cursors and the time of which this reading was recorded.

**Avg.Between A and B 256.8** is the average reading from all the data between the two cursors.

To remove the cursors, click once onto the graph or double click somewhere else on the graph where you would like **CursorA** to be moved.




When using the graph in the **DATALOGGER** window you can zoom in on certain areas by pressing the **Undo Zoom** button at the top right hand side of the window and using the mouse, **click on the graph and drag the mouse** to create a square in the place you wish to zoom in on. To undo zoom press the **Undo Zoom** box again.

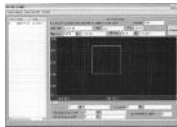

To save any changes made in the **DATALOGGER** window go to **Save Data(S)** at the top of the window.

# YORK Survey Supply

## Lux Meter

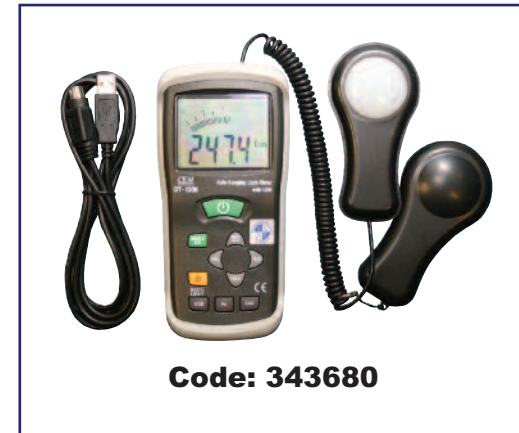

Code: 343680

## Operating Instructions

York Survey Supply Centre, Prospect House, George Cayley Drive, Clifton Moor, York, England YO30 4XE  
Tel: +44 (0) 1904 692723 Fax: +44 (0) 1904 690385  
E-Mail: sales@yorksurvey.co.uk www.yorksurvey.co.uk

# Lux Meter

## I Introduction

- > The digital illuminance meter is a precision instrument used to measure illuminance (Lux, Footcandles).
- > It meets CIE photopic spectral response.
- > The illuminance meter is compact, tough and easy to handle due to its construction.
- > The light sensitive component used in the meter is a very stable, long life silicon photo diode and spectral response filter.


## II Features

- > Light measuring levels ranging from: 0.1Lux ~ 0.1kLux/0.01FC ~ 0.01kFC.
- > High accuracy and rapid response.
- > Data-hold function for holding measuring values.
- > Unit and sign display for easy reading.
- > Automatic zeroing.
- > Meter corrected for spectral relative efficiency.
- > Correction factor need not be manually calculated for non-standard light sources.
- > Short rise and fall times.
- > Peak-hold function for tracing the peak signal of light.
- > Capable of selecting measuring mode in Lux or FC scale.
- > Auto power off 30 minutes.
- > Maximum and minimum measurements.
- > Relative reading.
- > Easy to read, large backlit display.
- > USB output connect with PC.
- > Auto ranging

## III Specifications

- > Display: 3 1/2 digit LCD screen with high speed 40 segment bar graph.
- > Measuring range: x400.0 Lux, 4000 Lux, 40.0 kLux and 400.0 kLux / 40.0 FC, 400.0 FC, 4000 FC and 40.0 kFC.
- NOTE: 1FC = 10.76Lux, 1kLux = 1000Lux, 1kFC = 1000FC
- > Over range display: LCD will show "OL" symbol
- > Accuracy: ±5% rdg ± 10d (<10,000Lux), ±10% rdg ± 10d (>10,000Lux)
- > Repeatability: ±3%
- > Sampling rate: 1.5 times/sec of analogue bar graph indication; 1.5 times/sec of digital display
- > Photo detector: One silicon photo diode and spectral response filter
- > Operating temperature and humidity: 0°C to 40°C (32°F to 104°F) and 0% to 80%RH
- > Storage temperature and humidity: -10°C to 50°C (14°F to 140°F) and 0% to 70%RH
- > Power source: 1x 9V battery
- > Photo detector: Lead length: 150cm (approx.)
- > Photo detector: Dimensions: 115L x 60W x 20H (mm)
- > Meter dimensions: 170L x 80W x 40H (mm)
- > Weight: 390g
- > Accessories: Carry case, instruction manual, battery

## 1. Name and Functions

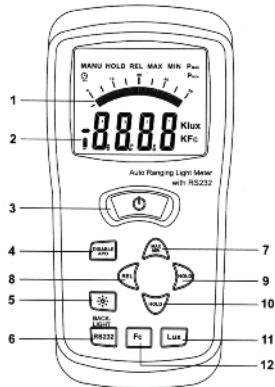

- (1) LCD Screen
- (2) Auto-Ranging

Both Lux and FC (Footcandles) have four ranges each: 400.0 Lux, 4000 Lux, 40.0 kLux and 400.0 kLux for the Lux range and 40.0 FC, 400.0 FC, 4000 FC and 40.0 kFC for the FC range. These ranges change automatically with how much light is exposed to the sensor and the reading on the display indicates this.

### (3) Power Button

For manual operation press the power button and the instrument will switch on. If this clock symbol is displayed in the LCD screen in the top left hand corner, press **DISABLE APO** to remove this symbol and manual operation has now been selected and auto power off has now been disabled, allowing the meter to be turned off manually when needed. To switch the meter off, press the power button and the instrument should turn off instantly.

### (4) Disable Auto Power Off Button

For **auto power off**, turn the unit on by pressing the power button and if the clock symbol is not showing on the LCD screen, press the **DISABLE APO** button and this clock symbol should appear on the display. This means that auto power off has now been selected and the meter should turn off automatically after 30 minutes.

### (5) Back Light Button \*

This button allows you to turn a blue backlight on the LCD screen on/off.

### (6) USB Button

This button is used to make a connection from the meter to the computer through the USB cable. If the **USB** button is not pressed before the cable is placed into the USB port and the meter and software is open, it may not connect correctly. Also, if the **USB** button is pressed, but you do not want to connect the meter to the computer straight away, the meter will stop recording and will wait to be connected. If you do not wish to connect with the computer at the present time, but the **USB** button has been pressed, the meter will have to be reset which could result in recorded data stored in the unit being lost.

### (7) MAX/MIN Button

This button allows you to select maximum or minimum hold. To select maximum press the **MAX/MIN** once and **MANU MAX** will appear across the top of the LCD screen. The displayed Lux/FC is the maximum value recorded since activation. For minimum, press **MAX/MIN** again, whilst **MANU MAX** is still showing and **MANU MIN** should appear in its place on the screen. The current value shown is the minimum value recorded since activation.

### (8) REL Button

To view the relative reading, press **REL** and **MANU REL** will appear at the top of the screen. The relative reading shown is the difference between the first and second reading detected by the meter. For example: If the first reading taken was 60 and the second was 40, then the relative reading on the meter would be 20. So with every two readings detected by the meter, the instrument will work out the difference and change automatically.

### (9) PEAK Hold Button

This button allows you to select maximum or minimum peak hold. To view the maximum peak hold, press the **PEAK** button once and across the top of the LCD screen **MANU PMAx** will appear. The reading currently displayed on the meter is the maximum peak in the results since the meter was activated. To select minimum peak hold, press the **PEAK** button again, whilst **MANU PMAx** is still showing and **MANU PMIN** will appear. The reading displayed will be the minimum peak in the results since the meter was activated.

### (10) HOLD Button

Press **HOLD** to freeze a current reading on the display. Press **HOLD** again to release.

### (11) Lux Button

To select readings in Lux, press the **Lux** button and **Lux** will appear next to the value.

### (12) FC Button

To select FC, press the **FC** button and **FC** will appear next to the reading on the display. 1FC = 10.76Lux.

## 2. Operating Instructions

- (1) Turn the meter on using the power button.
- (2) Select the desired scale, either Lux or FC.
- (3) Remove the protective cap from the light sensor and face the sensor into the light source, in a horizontal position, so that the whole of the sensor is exposed to all the light, making sure that the readings taken are accurate. Any other position could corrupt the readings.
- (4) Read the measurement on the LCD screen.
- (5) When the instrument is not in use, it is important that the protective cap is replaced and the meter is switched off.
- (6) Battery Check: When the battery is low, in the bottom left hand corner a battery symbol will appear. This is an indicator to let you that the voltage in the battery is running low and it needs to be replaced. If it is not replaced, having a low battery can affect how well the unit will work and its efficiency will drop.

## 3. Maintenance

- (1) The white plastic disc on the light sensor should be cleaned when necessary with a damp cloth, as any dirt on the sensor could corrupt the readings.
- (2) The instrument should not be stored where the temperature and humidity is excessively high. Any moisture that gets inside the instrument could damage the components inside the meter and stop the instrument from operating correctly.
- (3) To ensure that the meter is working correctly it is recommended to have the meter calibrated annually.

## 4. Recommended Illumination

LOCATIONS		Lux	FC
OFFICE	Conference, Reception room	200 ~ 750	18 ~ 70
	Clerical work	700 ~ 1,500	65 ~ 140
	Typing drafting	1,000 ~ 2,000	93 ~ 186
FACTORY	Visual work at production line	300 ~ 750	28 ~ 70
	Inspection work	750 ~ 1,500	70 ~ 140
	Electronic parts assembly line	1,500 ~ 3,000	140 ~ 279
	Packing work, Entrance passage	150 ~ 300	14 ~ 28
HOTEL	Public room, Cloakroom	100 ~ 200	9 ~ 18
	Reception	200 ~ 500	18 ~ 47
STORE	Cashier	750 ~ 1,000	70 ~ 93
	Indoors Stairs Corridor	150 ~ 200	14 ~ 18
	Show window, Packing table	750 ~ 1,500	70 ~ 140
HOSPITAL	Forefront of show window	1,500 ~ 3,000	140 ~ 279
	Sickroom, Warehouse	100 ~ 200	9 ~ 18
	Medical Examination Room	300 ~ 750	28 ~ 70
SCHOOL	Operating room, Emergency treatment	750 ~ 1,500	70 ~ 140
	Auditorium, Indoor Gymnasium	100 ~ 300	9 ~ 28
SCHOOL	Classroom	200 ~ 750	18 ~ 70
	Laboratory, Library, Drafting room	500 ~ 1,500	47 ~ 140

## 5. Installing the Software

- (1) Start Windows
  - (2) Insert the CD into the CD drive
  - (3) If the **InstallShield Wizard** does not appear automatically, go to **START** at the bottom of the desktop, then **Run...** then browse for **1309 (D:)** which is the name of the software you wish to install.
  - (4) By clicking on **1309 (D:)** it will open up the files stored within the CD. Open the **SETUP** file and follow the instructions to install the software.
  - (5) Once installation is complete, you will see a **red recycling symbol** appear on the desktop with **DT 1309** underneath it. This means that the installation was successful. **If you have the SL-8851 or SL8852 sound level meter, installing the software is not necessary because the hardware stored in these meters is the same as the hardware stored in the LX-1309.**
- If you do not have these products, it is necessary to install the hardware as the software will not be ready for use with it. **Do not remove the CD** even though installation is complete because it is needed for installing the hardware.


## 6. Installing the Hardware

- (1) With the CD for installing the software still in the CD drive, turn the meter on and plug the meter into the **USB port** with the **USB cable** supplied with the meter.
- (2) At the bottom of the desktop, on the right hand side a message will appear indicating that the computer has detected **new hardware in the USB port**. If the **Found New Hardware Wizard** window does not appear, double click on this message and this should open the **Hardware Wizard** window for you.
- (3) In this window it will ask you if you would like to connect to **Windows Update** to search for software. Click **'No, not this time'** because you already have the software installed and the software disc in the CD drive, then press **next**. Follow the instructions to install the hardware. In the last window it should say **CP2101 USB Composite Device**, this means that the first hardware driver has been installed.
- (4) Click **Finish** and you will notice that the same **Found New Hardware Wizard** window will appear on the desktop. Do not press **CANCEL**, as this window is for installing the second hardware driver. Install this driver in the same way as the previous driver and in the last window instead of **CP2101 USB Composite Device**, it should say **CP2102 USB to UART Bridge Controller**. Click **FINISH** and both hardware drivers

should be installed, allowing the software to be used with the device. If you wish to un-install the drivers, in add or remove programs (which can be found in the control panel) you will not find two separate drivers with the names **CP2101 USB Composite Device** and **CP2102 USB to UART Bridge Controller**, you will find one driver called **CP210x USB to UART Bridge Controller**. This is because both drivers, when stored to the computer, are stored and saved together, so by un-installing this you are, in fact, un-installing both the drivers.

## 7. Using the Software


- (1) Open the software and connect the meter to the computer with the USB cable.
- (2) Turn the meter on and press the **USB** button on the meter to allow the meter to be connected to the software.
- (3) On the software you will see an image of the lux meter that has the words **No Connection** on the LCD screen. To create a connection, go to **Com Port(C)** and on the drop down menu select **Com3(M)**.

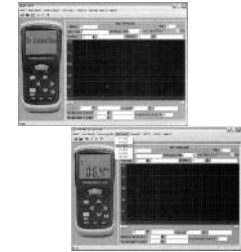


If the connection is successful, the lux meter image on the software should now be displaying the same information as the actual meter. In some cases this com port will not work and **Com4(4)** will have to be selected instead, but the meter will still work with the software exactly the same as it would with **Com3(M)** selected. If this is also unsuccessful, try selecting one of the other com ports until a connection is made.

## 8. Recording Data

To record data using the software, follow the instructions for **7. Using the Software** then go to **Real Time(R)** at the top of the screen and select **Run(R)** to start recording data on the line graph or press the **lightning bolt symbol** on the tool bar.

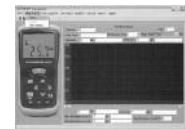

Once **Run(R)** has been activated, a red line will appear on the graph and start to move with every reading detected by the meter. To change the type of graph from a line graph, go to **Graph(G)** and the graph can be changed from **Line(L)** to **Histogram(H)**.

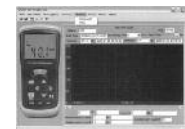

Line Graph



Histogram Graph



To stop the software from recording, go to **Real Time(R)** and select **Stop(S)**. This will stop the software from recording data and stop the graph from moving.