



Set the area units as square centimeter (fig. as above)

Press "MAX/MIN" to increase the data, press "UNITS" to decrease the data



Set the area units as square meter (fig. as above)

Press "MAX/MIN" to increase the data, press "UNITS" to decrease the data



Set the area units as square feet (fig. as above)

Press "MAX/MIN" to increase the data, press "UNITS" to decrease the data

Press "AVG" to increase the data, press "Cl" to decrease the data

Air volume



Air volume display x 100 the actual volume = displayed data x 100

8. Notes

- 1) This meter has already been calibrated before delivery.
- 2) Repairs or servicing should only be performed by York Survey Supply Centre.
- 3) Remove the battery when the meter is to be stored for long periods of time to avoid battery leakage.

9. Accessories

- ① Sensor
- ② User manual
- ③ 9V battery

YORK Survey Supply



Vane-Type Thermo-Anemometer



Operating Instructions



Prospect House, George Cayley Drive, Clifton Moor, York, England YO30 4XE

Tel: +44 (0) 1904 692723 Fax: +44 (0) 1904 690385
E-Mail: sales@yorksurvey.co.uk www.yorksurvey.co.uk

Follow us!

 York Survey Supply Centre
 @York_Survey
 @York_Survey

1. Safety

Read the following safety information carefully before attempting to operate the meter.

Use the meter only as specified in this manual; otherwise, the warranty may be invalidated.

◆ Environment conditions:

RH≤90% (Non-Condensation)

Operating Temperature: -20°C ~ 60°C


◆ Maintenance

Repairs or servicing should only be performed by ATP

Instrumentation Ltd.

Cleaning: Wipe the unit with a dry soft cloth. Do not use abrasives or solvents on this instrument.

◆ Safety Symbol

 Complies with EMC

2. Introduction

The Anemometer is designed for measuring air velocity, air flow and temperature. 35mm high contrast easy-read backlit LCD display with function indicators for air velocity, temperature and air velocity level, shown at the same time.

3. Features

Circuit: based on fast and high accurate MCU design

High accuracy NTC resistance for air temperature measuring

Air velocity bar graph indicator

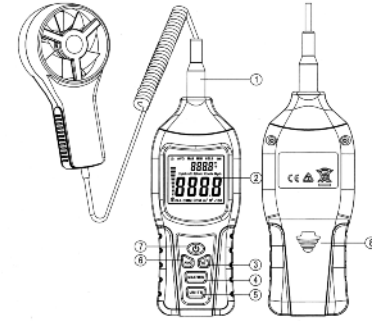
Low voltage battery indication

MAX/MIN/AVG/HOLD function

4. Specifications

	-30°C ~ 60°C (-22°F ~ 140°F)	
Air Velocity Range	0.4 ~ 30 m/s	0.8 ~ 58 Knots
	1 ~ 67 MPH	80 ~ 5900 ft/min
	1.4 ~ 108 Km/h	
Air Temp. Accuracy	±1.5°C (±2.7°F)	
Air Velocity Accuracy	±3%±0.1	
Resolution	0.1	
Sampling rate	1 time per second	
Operating temperature	-20°C ~ 60°C (-4°F ~ 140°F)	
Operating humidity	<90%RH (Non-condensation)	
Storage temperature	-30°C ~ 60°C (-22°F ~ 140°F)	
Storage humidity	<80%RH	
Air velocity level indication	level 0-16 with analog bar-graph	
Measurement average	average reading of the latest 10 records	
Maximum / Minimum	MAX/MIN	
Reading freezing	HOLD	
Area set	0.001 ~ 9999 m ² (0.001 ~ 9999ft ²)	
Power Supply	1x 9V battery with type of 006P,NEDA1604 or IEC6F22	
Auto power off	Automatically power off after approx. 15 minutes of inactivity	
Display	4 digit 35mm LCD display	
Battery life	at least 30 hours	
Dimension(L*W*H)	158*62*32mm	
Weight	292g	

5. Meter Description



- ① Air Velocity Sensor
- ② LCD display
- ③ Temperature Units Selection
- ④ MAX/MIN/HOLD Button
- ⑤ Velocity Units Selection
- ⑥ AVG/Backlight Button
- ⑦ Power ON/OFF
- ⑧ Battery cover


6. LCD Display Description






- ① Timing shutdown Icon
- ② AVG Icon
- ③ MAX Icon
- ④ MIN Icon
- ⑤ HOLD Icon
- ⑥ Battery Icon
- ⑦ Temperature unit
- ⑧ Air Velocity Units: m/s, km/h, ft/min, knots (nautical miles per hour), MPH
- ⑨ Air Velocity readings
- ⑩ ×100 (100 times for air volume reading)
- ⑪ Area units: m², ft²
- ⑫ Air flow units: CMM (cubic meters per minute), CFM (cubic feet per minute)
- ⑬ Air Velocity level indication
- ⑭ Analog bar-graph indication for air velocity level
- ⑮ Measuring temperature readings


7. Operating Instructions

Open battery cover and install a 9-volt battery in the battery compartment.


Power ON: To turn the meter on, press the  button for 1 second until the LCD is lit, then release the button.


Power OFF: To turn the meter off, press and hold the  button for approx. 3 seconds until the LCD is switched off, then release the button.


 icon: When the low battery icon  appears, replace the meter's battery.

(5)  Auto power off icon, the meter will automatically turn off after approx. 15 minutes of inactivity.



(6) LCD Backlight: After turning the meter on, momentarily


press  button, the backlight will turn on/off. It will automatically turn off after approx. 30 seconds of inactivity.

(7) Units selection: After enter measuring mode, press  button to select desired units.

(8) HOLD: Press  button one time, "HOLD" icon will appear on LCD, which indicates the reading is frozen.




Press the button again to exit HOLD mode.

(9) MAX/MIN: Press  button one time until "MAX" icon appears on the LCD to view the current MAX reading; press the button again, "MIN" icon will appear to view the current MIN reading. To exit the MAX/MIN mode, press the  button again.

(10) AVG Button: Press  button one time, 'AVG' will appear on LCD and the meter will enter the average measuring mode. The average reading of the latest 10 records will be displayed on the LCD.

(11) Temperature Units selection: Press  button to select °C or °F.

(12) Area Set

Press and hold the  button and then power the meter on, release  button when LCD displays, at the time the display will show as following (Note: the area units can be set by press  button for 3 seconds)